


Walker Pro Instructions

www.thinktankphoto.com

thinkTANK®

VENTURE • OBSERVE • CONNECT™

STERNUM STRAP ADJUSTMENT AND REMOVAL

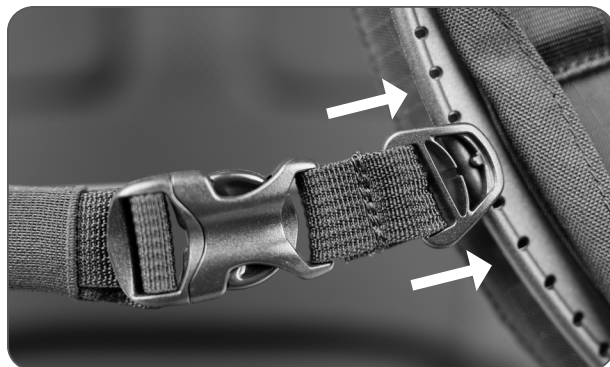

Step 1: Adjust the sternum strap up/down by pushing the clip inwards towards the slide rail.




Step 2: Adjust up or down while continuing to apply inward pressure as shown in Step 1.

The strap can be slid off the rails and removed if desired.

TRIPOD / MONOPOD STRAP ATTACHMENT



Step 1: Locate the adjustable Tripod/Monopod Strap provided with the Walker Pro

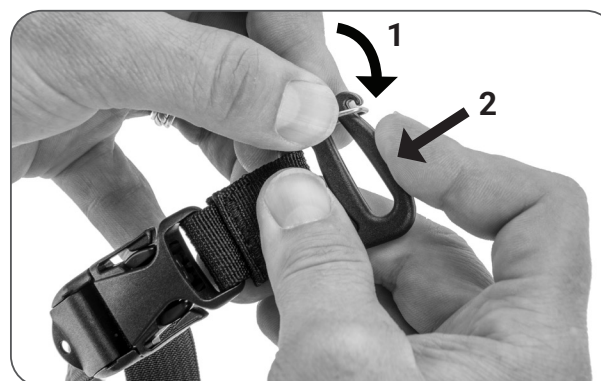

Step 2: Open the double gatekeeper clips on each side of the strap by pressing the metal spring clip inward (1), and then pushing down on the plastic portion (2) to release the gate.

Step 3: Slide the opened double gatekeeper buckle through the webbing loops at the top or sides of the Walker Pro and close it by depressing the top plastic bar and securing the gate.



Walker Pro Instructions

www.thinktankphoto.com

thinkTANK®

VENTURE • OBSERVE • CONNECT™

TRIPOD / MONOPOD - FRONT ATTACHMENT (Medium/Large Tripods)



Step 1: Pull out the tripod cup from the hidden pocket located on the lower-front edge of the pack.



Step 2: Place two of the tripod feet within the tripod cup and secure with the attached strap.



Step 3: Clip the included Tripod/Monopod Strap to the webbing loops on the frontside of the pack. Wrap the strap once around the tripod before buckling to keep it from shifting while walking.

TRIPOD / MONOPOD - SIDE ATTACHMENT (Small/Medium Tripods)



Step 1: Clip the included Tripod/Monopod Strap to the webbing loops on either side of the pack. Place the legs within the side pocket.

Step 2: Wrap the strap once around the tripod before buckling to keep it from shifting while walking.

REMOVABLE STABILIZER WAIST BELT



Remove the waist belt by backing out the webbing from the two tri-glide clips attached to the backpack.